



Clock Hands Installation Method


- 1 Install in the order shown in the diagram: Hour hand, minute hand, second hand. Ensure alignment with the 12 o'clock position. Each pointer should be balanced, straight, and not crossing.

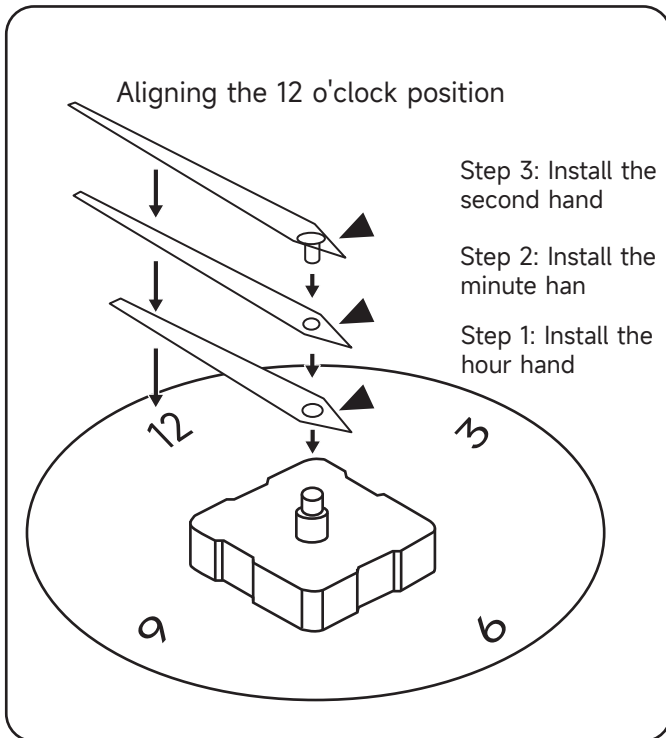

The hour hand, minute hand, and second hand need to be aligned to 12 o'clock uniformly.

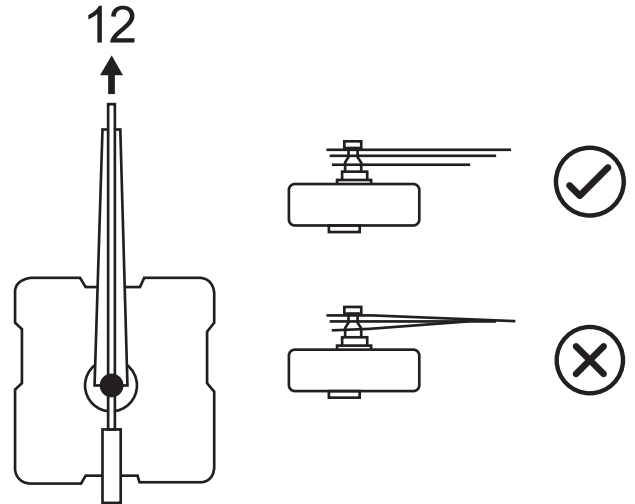


① Non-marking nail

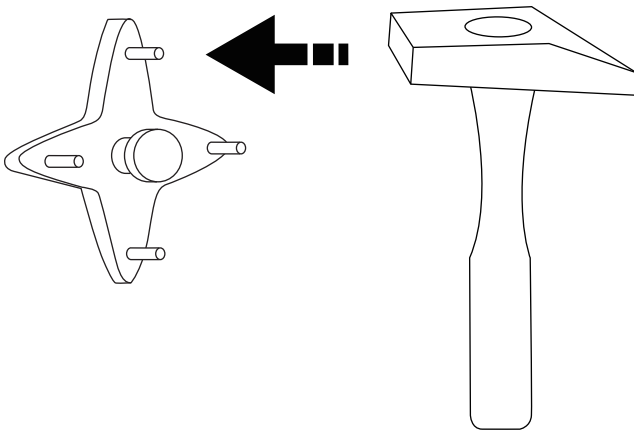




Use non-marking nails at the hangings and hammer them in to secure them.

② Wallpaper

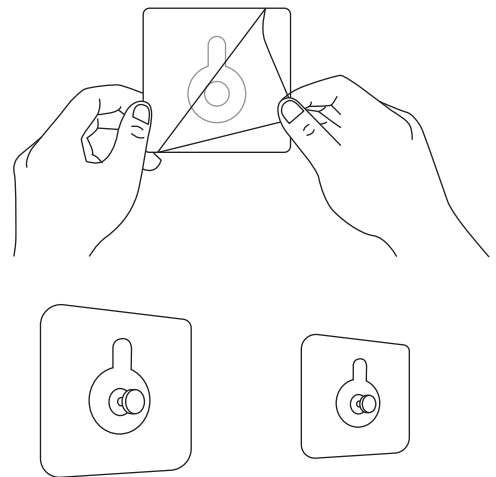


Attach the stick-on hangers to the wall clock hanging.

③ Perforated Nail Installation

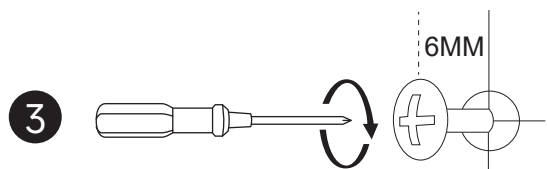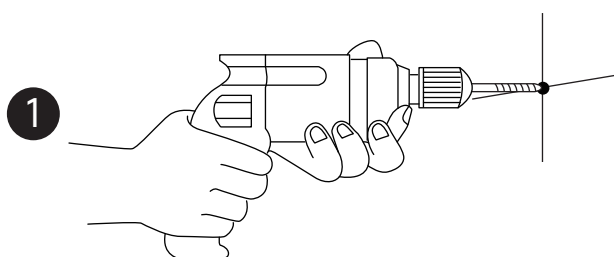

Battery Installation and Time Adjustment

- 1 Please insert one AA carbon battery into the battery compartment on the back of the clock. (Any brand of AA carbon battery can be used).
- 2 Please insert the battery according to the "+" polarity instructions marked in the battery card slot.
- 3 Time Adjustment: After installing the battery, adjust the local time using the gear mechanism.

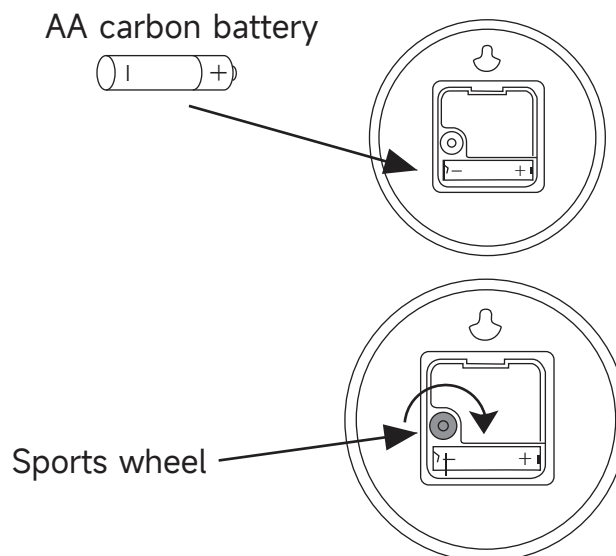

⚠ Notice

Welcome to purchase our product, thank you for your purchase and support.

To ensure the normal operation of the clock, please carefully read the instructions and notes:

1. Please insert one AA carbon battery into the battery compartment on the back of the clock. Place the battery according to the markings of "+" polarity in the battery slot.
2. Setting the time: Rotate the bottom of the movement core (clockwise) to adjust the time.
3. Sometimes the clock stops running due to logistics failure, please don't worry, please refer to the following related methods to solve it.
4. During installation, please be careful to protect the clock hands from bending. You can choose to assemble this product on a soft surface (such as a carpet) to protect the surface.
5. Because small parts may become loose during transportation, please check for missing parts and contact us if necessary.
6. If you encounter any problems during use or installation, please feel free to contact us. We will reply to you promptly within 5 hours and assist in resolving the issue.

Possible	Possible Causes	Solution
Clock Hands Not Moving	Battery is Dea	Replace with a new battery
	Connect the positive and negative poles of the battery reversely	Adjust the positive and negative directions of the battery
When the hands stop, the movement does not work	Inappropriate or Low Battery Power	Replace with new AA batteries
	The pointer is pressed too tightly	Remove clock hands and reinstall
	Pointers stick together or rub against each other	Pull the pointers up until they are parallel and not touching each other
	The pointer is deformed or loose and falls	Adjust pointers and reinstall